 


Magicstomp Quick Guide

Plug In, Power Up, and Play

Power

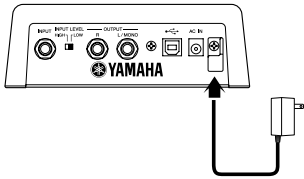

No switch, just plug in the AC adaptor to turn ON the Magicstomp.

 
Turn It Up



The VOLUME knob sets the overall output level.

Pick a Patch

The "-" switch decreases the patch number. The "+" switch increases the patch number.



Use the ON/OFF switch to bypass the effect.

* Hold either the "+" or "-" switch to scroll through patch numbers faster.

Patch Flow

99 User Patches and 99 Preset Patches

User Patches [U01-U99]

Preset Patches [P01-P99]

U01 U02 U03 ··· U11 U12
U13 ··· U97 U98 U99 P01
P02 ··· P99 U01 (cycles back to the top)

Easy Patch Tweaking

Patch No. Patch Name

P01▶HeavyHiGain
S▶GAIN▶MSTR▶TONE

Assigned knob functions



Use the knobs to adjust parameters.

 
P01▶HeavyHiGain
S▶GAIN▶MSTR▶TONE

Graphics indicate current value.



Rotate the knob to adjust parameter.

Current parameter value.

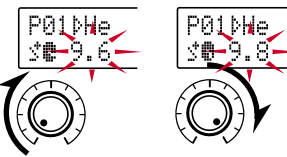

First align the knob position with the displayed value, then graphics will change in real-time to indicate the knob's current value and position.

Save Your Patches

Overwrite The Original Patch

STORE- ●

U01▶HeavyHiGain
NOW STORING...

To save data to the currently selected patch number, simply hold down the STORE switch for more than 1 second.

Save To Another Patch

STORE- ●

Press and release the STORE switch (release within 1 second).

U01▶HeavyHiGain
PRESS[STORE]1sec



Select a Patch No.

U01▶HeavyHiGain
PRESS[STORE]1sec

After the display shown above appears, use the "+" or "-" switches to select the Patch No. to which you want to save the data.

STORE- ●

Hold down the STORE switch for more than 1 second to store the patch.

 
U01▶HeavyHiGain
NOW STORING...

Performance Mode Offers Playing Convenience



Simultaneously hold any two foot switches for more than 1 second to switch from the normal operating mode (UP/DOWN Mode) to the Performance Mode.

U01▶HeavyHiGain
S▶GAIN▶MSTR▶VOL

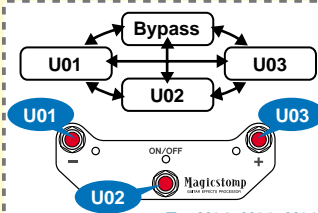

Ex. U01, U02, U03

The Performance Mode lets you easily choose from among three patches.



To switch to another group, hold down the "+" or "-" switch for more than 1 second.



Simultaneously hold down any two foot switches for more than 1 second to switch back to the normal operating mode (UP/DOWN Mode).

U01▶HeavyHiGain
S▶GAIN▶MSTR▶VOL

Chromatic Auto Tuner



To enter the Tuner Mode, press and hold the ON/OFF switch for more than 1 second. Output is muted.

TUNE PITCH: 440Hz
: |

Standard Pitch

TUNE PITCH: 440Hz
E : >|K



The graphics in the display and switch LEDs will guide you in tuning.

TUNE PITCH: 440Hz
E : >|K



Use the "+" or "-" switch to change the standard pitch.



Press the ON/OFF switch to return to the normal operating mode.