 


# Magicstomp Quick Guide

## Plug In, Power Up, and Play

### Power

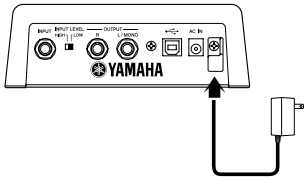

No switch, just plug in the AC adaptor to turn ON the Magicstomp.


### Turn It Up



The VOLUME knob sets the overall output level.

### Pick a Patch

The "-" switch decreases the patch number. The "+" switch increases the patch number.

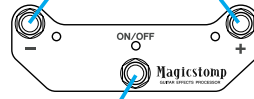

Use the ON/OFF switch to bypass the effect.

\* Hold either the "+" or "-" switch to scroll through patch numbers faster.

### Patch Flow

99 User Patches and 99 Preset Patches

User Patches [U01-U99]

Preset Patches [P01-P99]

U01 U02 U03 ··· U11 U12  
U13 ··· U97 U98 U99 P01  
P02 ··· P99 U01 (cycles back to the top)

## Easy Patch Tweaking

Patch No. Patch Name

P01▶HeavyHiGain  
GAIN▶STR▶TONE

 
Assigned knob functions



Use the knobs to adjust parameters.


P01▶HeavyHiGain  
GAIN▶STR▶TONE

Graphics indicate current value.



Rotate the knob to adjust parameter.

### Current parameter value.

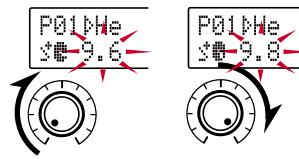 

First align the knob position with the displayed value, then graphics will change in real-time to indicate the knob's current value and position.

## Save Your Patches

### Overwrite The Original Patch

STORE- ●

U01▶HeavyHiGain  
NOW STORING...

To save data to the currently selected patch number, simply hold down the STORE switch for more than 1 second.

### Save To Another Patch

STORE- ●

Press and release the STORE switch (release within 1 second).

U01▶HeavyHiGain  
PRESS[STORE]1sec



Select a Patch No.

U01▶HeavyHiGain  
PRESS[STORE]1sec

After the display shown above appears, use the "+" or "-" switches to select the Patch No. to which you want to save the data.

STORE- ●

Hold down the STORE switch for more than 1 second to store the patch.

 
U01▶HeavyHiGain  
NOW STORING...

## Performance Mode Offers Playing Convenience



Simultaneously hold any two foot switches for more than 1 second to switch from the normal operating mode (UP/DOWN Mode) to the Performance Mode.

U01▶HeavyHiGain  
GAIN▶STR▶TONE

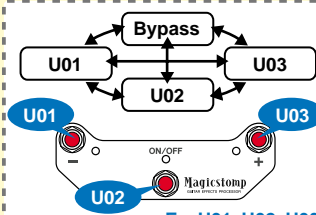

Ex. U01, U02, U03

The Performance Mode lets you easily choose from among three patches.



To switch to another group, hold down the "+" or "-" switch for more than 1 second.



Simultaneously hold down any two foot switches for more than 1 second to switch back to the normal operating mode (UP/DOWN Mode).

U01▶HeavyHiGain  
GAIN▶STR▶TONE

## Chromatic Auto Tuner



To enter the Tuner Mode, press and hold the ON/OFF switch for more than 1 second. Output is muted.

TUNE PITCH: 440Hz  
: |

Standard Pitch

TUNE PITCH: 440Hz  
E : >|K



The graphics in the display and switch LEDs will guide you in tuning.



Use the "+" or "-" switch to change the standard pitch.



Press the ON/OFF switch to return to the normal operating mode.